



Rebate Kit Installation

- 1) To change handing, simply remove 2 screws, and secure Strike Rebate Packer to opposite face of Strike Plate.

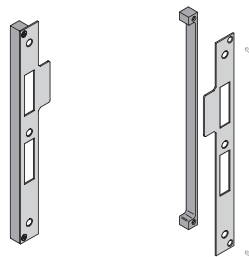


- 2) Recess door to enable Forend to finish flush with outer edge of rebate in door.

Ensure Lock cut out is central to door width.

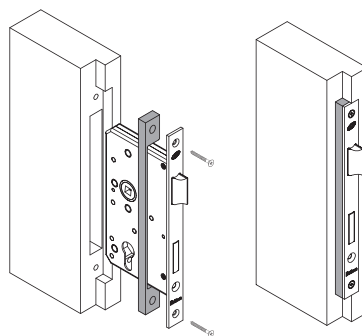

- 3) Prepare frame to accept Rebate Strike Assembly. Secure assembly with Screws provided.

Ensure cutout in Rebate Striker lines up with Latch/Bolt Head.

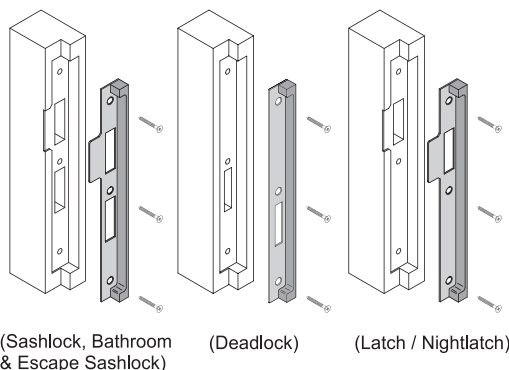

(Sashlock, Bathroom & Escape Sashlock)

(Deadlock)

(Latch / Nightlatch)

- 4) Check Lock operates freely when the door is closed.